

CLEANING & MAINTENANCE

- Clean oven and any accessory after each use.
- Before cleaning your oven, press the CANCEL/OFF button to turn OFF the countertop oven. Unplug the cord and allow it to cool before cleaning.
- To clean exterior of oven, wipe with a damp cloth. DO NOT IMMERSE IN WATER. Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.
- To clean the Wire Rack, Baking Pan, or Air Fry Basket/ Dehydrate Rack remove from the Oven and immerse in warm, soapy water and wipe with soft cloth or sponge. These accessories may also be washed in the top rack of the dishwasher. Dry thoroughly.
- Remove the Removable Crumb Tray and shake off crumbs. Wash with soapy water, and dry thoroughly. Cleaning the Crumb Tray often will avoid any accumulations.

WARRANTY

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. ("Calphalon") warrants that for a period of three year from the date of purchase, this product will be free from defects in material and workmanship. Calphalon, at its option, will repair or replace this product or any component of the product found to be defective during the guarantee period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive guarantee. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this guarantee. This guarantee is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain satisfaction guarantee performance. Calphalon dealers, service centers, or retail stores selling Calphalon, do not have the right to alter, modify or any way change the terms and conditions of this guarantee. This guarantee does not cover damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Calphalon or an authorized Calphalon service center. Further, the guarantee does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Calphalon's Liability?

Calphalon shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory guarantee or condition. Except to the extent prohibited by applicable law, any implied guarantee or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above guarantee. Calphalon disclaims all other guarantees, conditions or representations, express, implied, statutory or otherwise. Calphalon shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied guarantee lasts, so the above limitations or exclusion may not apply to you. This guarantee gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

WWW.CALPHALON.COM 1-800-809-7267

TSCLTVFD2_22EM3_GCDS-LD


P.N. NWL0001404511 Rev. B

Calphalon®

Performance French Door Air Fry Countertop Oven

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions, product labels and warnings before using Performance Air Fry countertop oven.
2.  This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs. Always protect your hands with non-slip oven mitts or similar.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord. Always grasp the plug and pull to disconnect.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance or removing a pan, containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.
13. Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
14. Oversize foods or metal utensils must not be inserted in the countertop oven as they may create a fire or risk of electric shock.
15. A fire may occur if the countertop oven is covered, touching or near flammable materials, including curtains, draperies, towels, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
17. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
18. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
19. Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may catch fire or melt.
20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. Empty the crumb tray after each use.
22. The glass door is made of tempered glass. Always inspect the glass door for chips, cracks or any other damage. Do not use the countertop oven if the glass door is damaged, as the glass may shatter during use.

23. If your toaster oven is equipped with a STAY-ON feature, toaster oven will stay ON if knob is turned counter-clockwise past zero. Exercise caution when using this feature and do not operate unattended for long periods.
24. Do not use with a programmer, timer, wireless plug adapter or outlet that allows control remotely, or connect to a circuit that is regularly switched on and off by the utility.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord. Do not pull, twist or otherwise abuse the power cord.

NOTICES

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your countertop oven to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

Product Diagram Performance French Door Air Fry Countertop Oven



PRODUCT DIAGRAM

1. LCD Screen Display
2. Light, Start and Cancel/OFF Buttons
3. Function Selector Dial
4. Turbo Convection Selector Button
5. Time/ Temperature Selector Button
6. Time/ Temperature Control Dial
7. *Air Fry Basket / Dehydrate Rack
8. *Baking Pan
9. *Removable Wire Rack
10. *Removable Crumb Tray
11. *Interior Light (not shown in image)

*These parts can be replaced on Calphalon.com or at 1-800-809-7267

HOW TO USE YOUR COUNTERTOP OVEN

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Turn the Function Selector Dial to select one of the following 11 options: Toast, Bagel, Bake, Air Fry, Roast, Broil, Pizza, Cookies, Keep Warm, Wings and Dehydrate. The Function Indicator will scroll as the Function Selector Dial is turned.
2. Once the desired function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature or shade (for TOAST and BAGEL functions). Turn clockwise to increase and counter-clockwise to decrease.
3. If the selected function has a preheat cycle, press the START button to begin preheating. PREHEATING will display on the LCD screen.
NOTE: Pressing START a second time will skip preheat cycle and begin cooking timer immediately. Your oven may take longer to reach set temperature if preheat cycle is skipped.
NOTE: Oven will beep to indicate preheat cycle is complete. If cooking cycle is not started after 5 minutes, oven will beep 3x and begin cooking cycle automatically.
4. Once preheating is complete and timer is set, put food into the Countertop Oven, using the Wire Rack, Baking Pan or Air Fry Basket / Dehydrate Rack. When using the Baking Pan, always place on top of the Wire Rack.
5. Once food is inside, close the doors and press the START button again. The Timer will begin counting down.
6. Once the allotted time has expired, the Countertop Oven will beep, and it will stop heating, but the display will remain lit for a period of time and then it will time out. You may press Cancel/OFF to turn off the display before it times out.
7. Use potholders to carefully remove food from the Countertop Oven.
8. Press the Cancel/OFF Button to turn off the Countertop Oven.